

## REMOVAL

### 1. REMOVE SEAT TRACK OUTER COVER

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape the screwdriver tip before use.

### 2. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

- (b) Disconnect the connector, then remove the front seat.

**NOTICE:**

**Be careful not to damage the body.**