## **REASSEMBLY**

BO1W5-01

Reassembly is in the reverse order of disassembly (See page BO-146).