

## DISASSEMBLY

### 1. w/ Seatback Board:

#### REMOVE SEATBACK BOARD

Remove the seatback board as shown in the illustration.


HINT:

Remove the seatback board in order "A", "B" as shown in the illustration.

### 2. REMOVE HEADREST

#### 3. REMOVE RECLINING ADJUSTER RELEASE HANDLE


Remove the screw and reclining adjuster release handle.

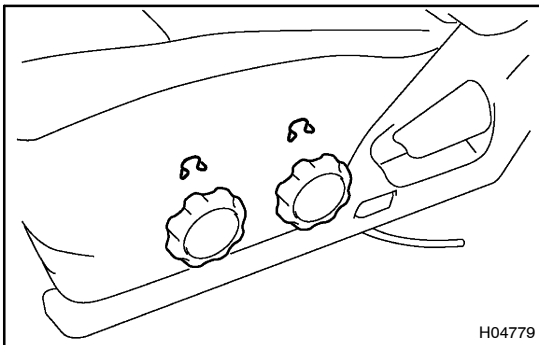

### 4. Vertical Adjuster Type:

#### REMOVE VERTICAL SEAT ADJUSTER KNOB


- (a) Remove the snap rings.
- (b) Remove the vertical seat adjuster knobs.

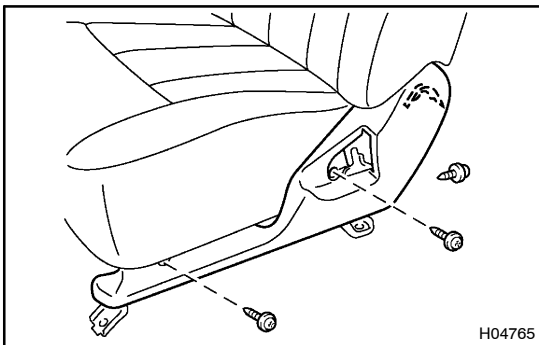

### 5. w/o Lumber Support:

#### REMOVE SEAT CUSHION OUTER SHIELD


- (a) Remove the 3 screws.
- (b) Remove the seat cushion outer shield as shown in the illustration.

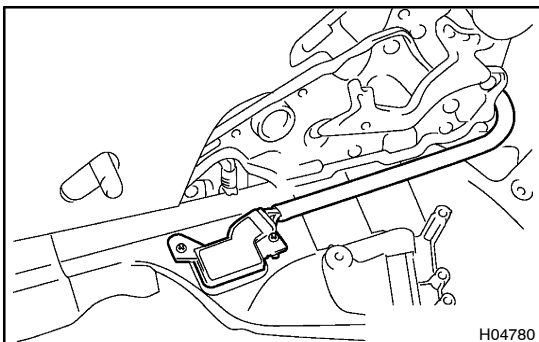


### 6. w/ Lumber Support:

#### REMOVE SEAT CUSHION OUTER SHIELD


- (a) Remove the 3 screws.
- (b) Disconnect the connector as shown in the illustration.
- (c) Remove the seat cushion outer shield.
- (d) remove the 2 screws and lumbar support switch.

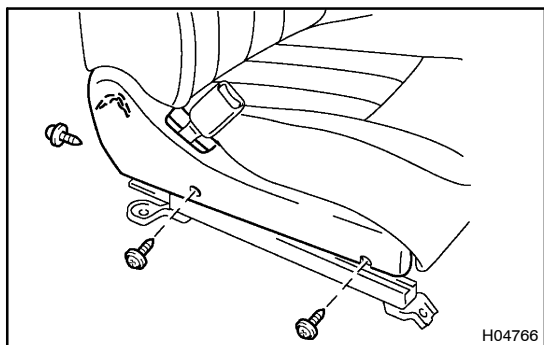**7. REMOVE SEAT CUSHION INNER SHIELD**


- (a) Remove the 3 screws.
- (b) Remove the seat cushion inner shield as shown in the illustration.

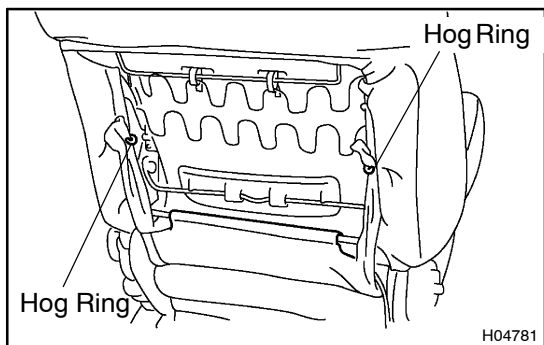**8. w/ Seatback Board:****REMOVE SEATBACK ASSEMBLY**


- (a) Remove the 2 hog rings.
- (b) Disengage the hook.

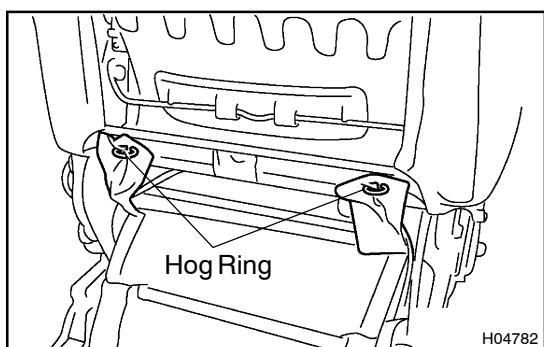


- (c) Remove the 2 hog rings.

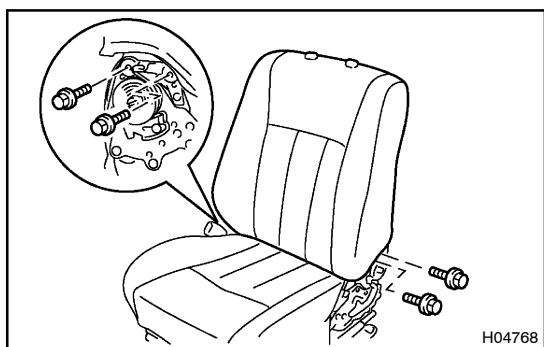


- (d) Remove the 4 bolts and seatback assembly.

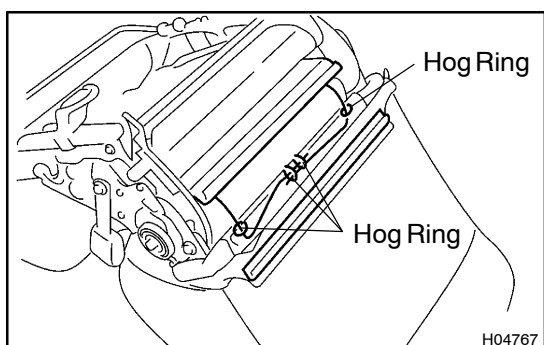**9. w/o Seatback Board:****REMOVE SEATBACK ASSEMBLY**

- (a) Disengage the hook.
- (b) Remove the 4 hog rings.

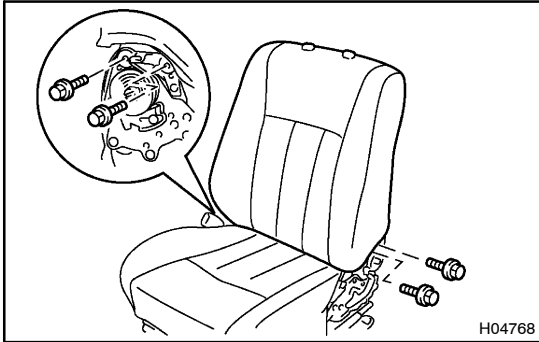


- (c) Remove the 4 bolts and seatback assembly.

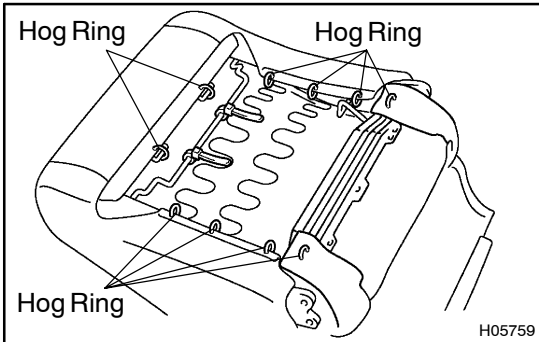

**10. w/ Seatback Board:**

**REMOVE SEATBACK FRAME**


- (a) Remove the 10 hog rings and 2 clamps.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback frame from the seatback cover with pad.

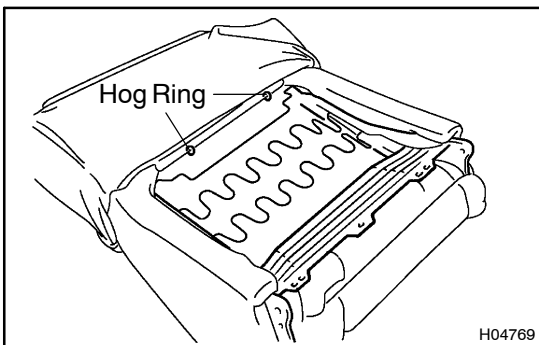

**11. w/o Seatback Board:**

**REMOVE SEATBACK FRAME**

- (a) Remove the 2 hog rings.
- (b) Remove the headrest support.
- (c) Remove the seatback frame.

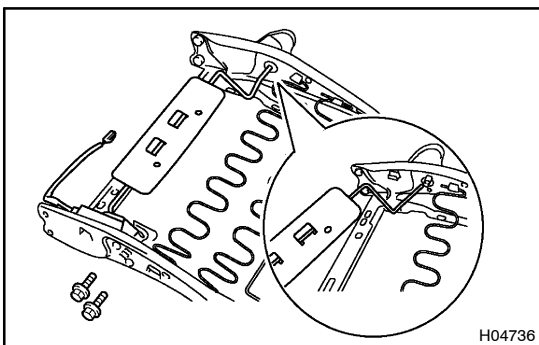


**12. w/ Lumbar Support:**

**REMOVE LUMBER SUPPORT**

Remove the 2 bolts and lumbar support.


**13. REMOVE SEATBACK COVER**

Remove the seatback cover from the seatback pad.

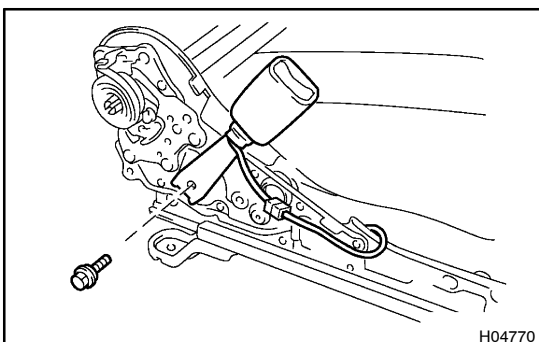


**14. REMOVE FRONT SEAT INNER BELT**

- (a) Disconnect the connector, then remove the clamp.
- (b) Remove the bolt, wave washer and front seat inner belt.

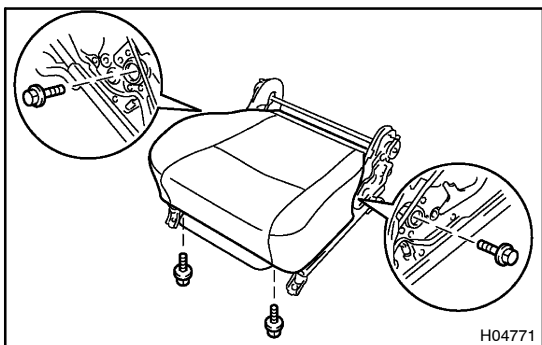**15. REMOVE SEAT CUSHION ASSEMBLY**


- (a) Remove the 4 bolts.
- (b) Remove the wire harness clamps from the seat cushion assembly.

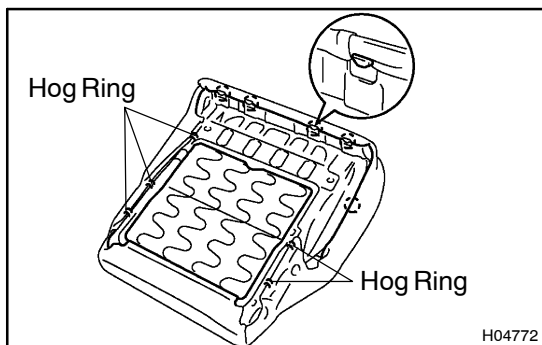**16. REMOVE SEAT CUSHION FRAME**


- (a) Remove the wire harness.
- (b) Disengage the hook.
- (c) Remove the 5 hog rings.

**17. REMOVE SEAT CUSHION COVER**

Remove the 10 hog rings and seat cushion cover.

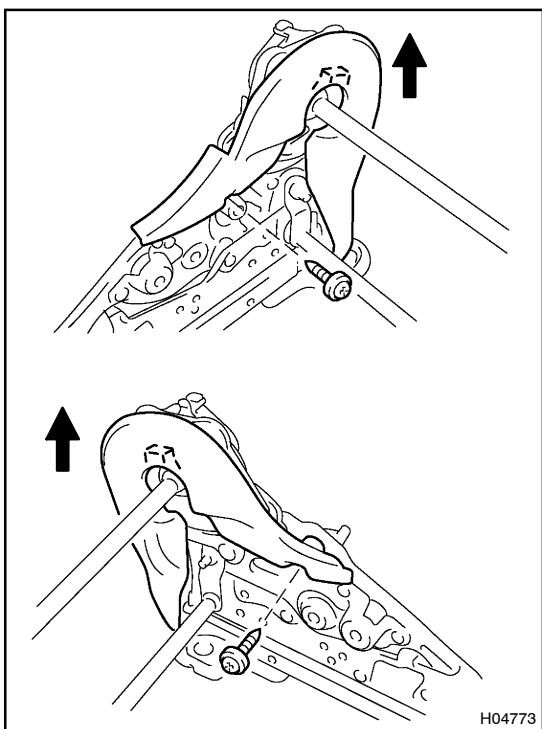**18. REMOVE RECLINING ADJUSTER INSIDE COVER**

- (a) Remove the screw and LH reclining adjuster inside shield.
- (b) Remove the screw and RH reclining adjuster inside shield.

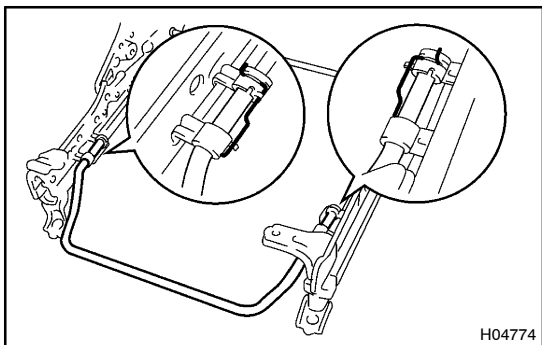**19. REMOVE SEAT TRACK ADJUSTER HANDLE**

- (a) Using a screwdriver, remove the 2 springs.

**HINT:**

Tape the screwdriver tip before use.


- (b) Remove the seat track adjuster handle.

**20. REMOVE REAR SEAT TRACK RETAINER**

Remove the 4 bolts and rear seat track retainer.

**21. REMOVE RECLINING CONNECTING PIPE**

Remove the reclining connecting pipe.

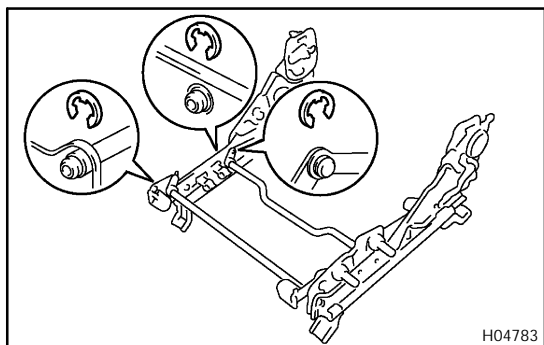**22. Vertical Adjuster Type:****REMOVE INNER SEAT ADJUSTER**

Remove the 3 E-rings and inner seat adjuster.