

REMOVAL

1. REMOVE SEAT TRACK OUTER COVER

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape the screwdriver tip before use.

2. REMOVE OUTER FRONT SEAT CENTER BELT

Remove the bolt from the body, and pull out the belt from the hole which penetrates the seat cushion.

3. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors, then remove the front seat.

NOTICE:

Be careful not to damage the body.