

REMOVAL

REMOVE REAR NO.1 SEAT

- (a) Fold the seatback down.
- (b) Unlock the seat lock, and swing the whole seat up and forward.
- (c) Remove the 4 bolts and rear No.1 seat.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)