REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BO-200).

BO1X0-01