


INSPECTION

1. INSPECT SEAT BELT PRETENSIONER ACTIVATION

Replace the seat belt if the seat belt cannot be drawn out or does not retract.

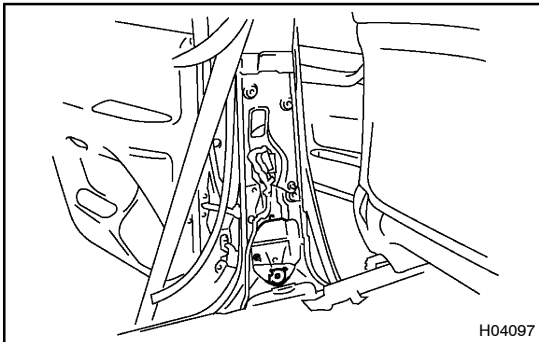

2. INSPECT SEAT BELT PRETENSIONER MOUNT

Remove the seat belt pretensioner and check for deformation of the mount. If you find any deformation, repair the mount.