

## REMOVAL

1. **DISCONNECT LEVEL WARNING SWITCH CONNECTOR**
2. **TAKE OUT FLUID WITH SYRINGE**

### NOTICE:


**Do not let brake fluid remain on a painted surface. Wash it off immediately.**

3. **DISCONNECT BRAKE LINES**

Using SST, disconnect the 2 brake lines from the master cylinder.

SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

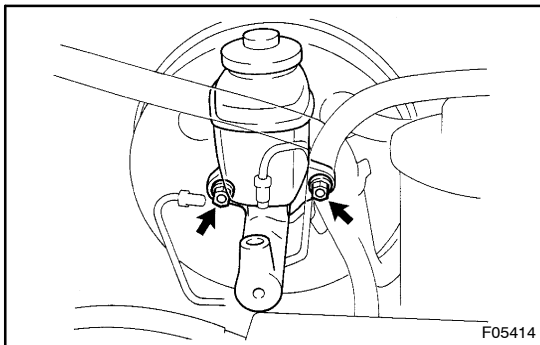

4. **REMOVE MASTER CYLINDER**

Remove the 2 mounting nuts and check valve bracket, and pull out the master cylinder.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**