


## DISASSEMBLY

### 1. REMOVE CYLINDER BOOTS

Using a screwdriver, remove the cylinder boot from the caliper.

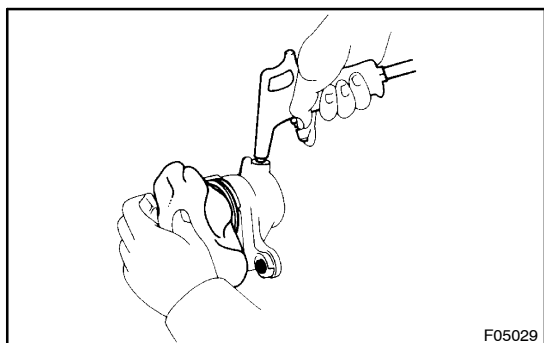


### 2. REMOVE PISTON

- Place a piece of cloth or a similar object between the piston and caliper.
- Use compressed air to remove the piston from the cylinder.

#### CAUTION:

**Do not place your fingers in front of the piston when using compressed air.**

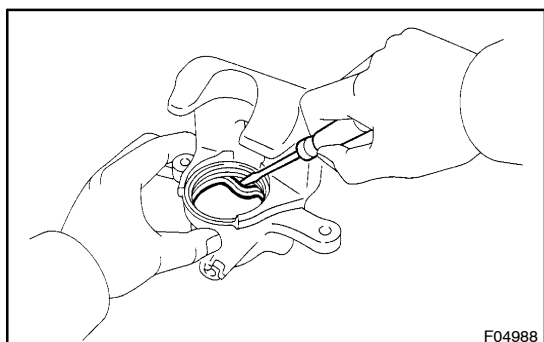

### 3. REMOVE PISTON SEALS FROM BRAKE CYLINDER

Using a screwdriver, remove the piston seals from the caliper.

#### HINT:

Tape the screwdriver tip before use.

### 4. REMOVE PIN BOOT AND SLIDING PIN

Using a screwdriver, remove 2 sliding pins, boots and bushing.

#### HINT:

Tape the screwdriver tip before use.