


## DISASSEMBLY


### 1. REMOVE VALVE BRACKET

- (a) Remove the nut, washer, bolt and 2 plate washers.
- (b) Remove the 2 nuts, washers, bracket and set plate from the valve body.

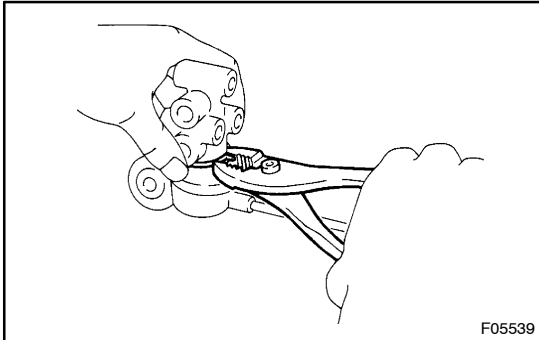


### 2. DISCONNECT SPRING FROM VALVE

Using pliers, remove the clip from the valve.

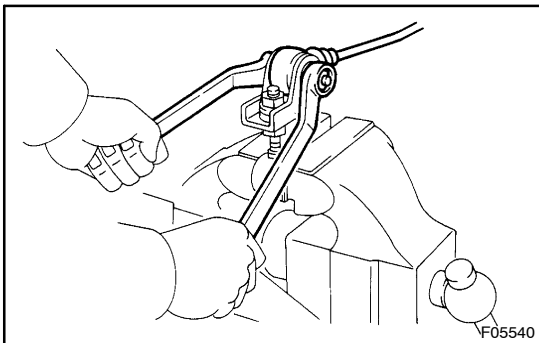

### 3. REMOVE SHACKLE NO. 1 AND NO. 2

- (a) Remove the bolt, 2 plate washers and load sensing spring assembly from the shackle No. 1.
- (b) Loosen the lock nut from the shackle No. 2.
- (c) Remove the nut, shackle No. 1 and lock nut from the shackle No. 2.

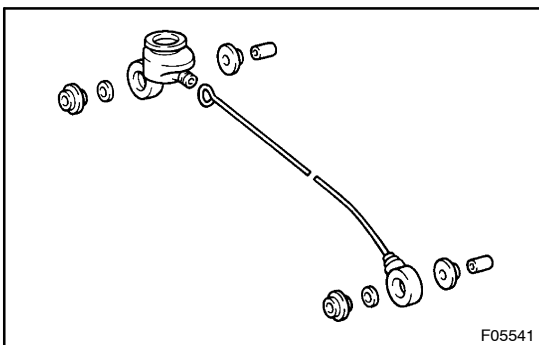

### 4. DISASSEMBLE LOAD SENSING SPRING

- (a) Remove the 4 bushings.
- (b) Remove the 2 collars and rubber plates.
- (c) Remove the load sensing valve boot.
- (d) Remove the load sensing spring boot.