


## REMOVAL

### REMOVE SPEED SENSOR

- (a) Disconnect the speed sensor connector.
- (b) Remove the resin clip and 4 clamp bolts holding the sensor harness from the steering knuckle and upper arm.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**

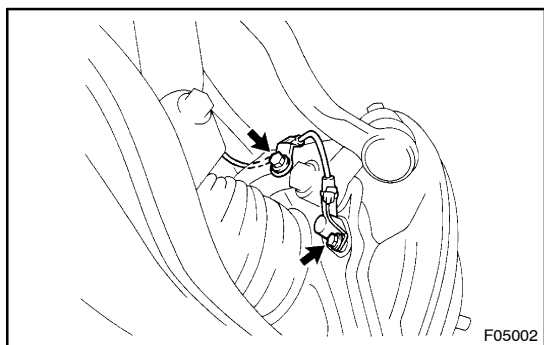

- (c) Remove the speed sensor installation bolt and speed sensor from the steering knuckle.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**