

INSTALLATION

Installation is in the reverse order of removal ([See page BR-92](#)).

AFTER INSTALLATION, CHECK SPEED SENSOR SIGNAL ([See page DI-312](#)).