

INSTALLATION

Installation is in the reverse order of removal ([See page CL-4](#)).

HINT:

After installation, bleed the system and adjust the clutch pedal.