

INSTALLATION

Installation is in the reverse order of removal ([See page CL-12](#)).

HINT:

After installation, bleed clutch system.