


# AUTOMATIC TRANSMISSION (A442F)

## HOW TO PROCEED WITH TROUBLESHOOTING

DISQU-01

When using hand –held tester, troubleshoot in accordance with the procedure on the following pages.

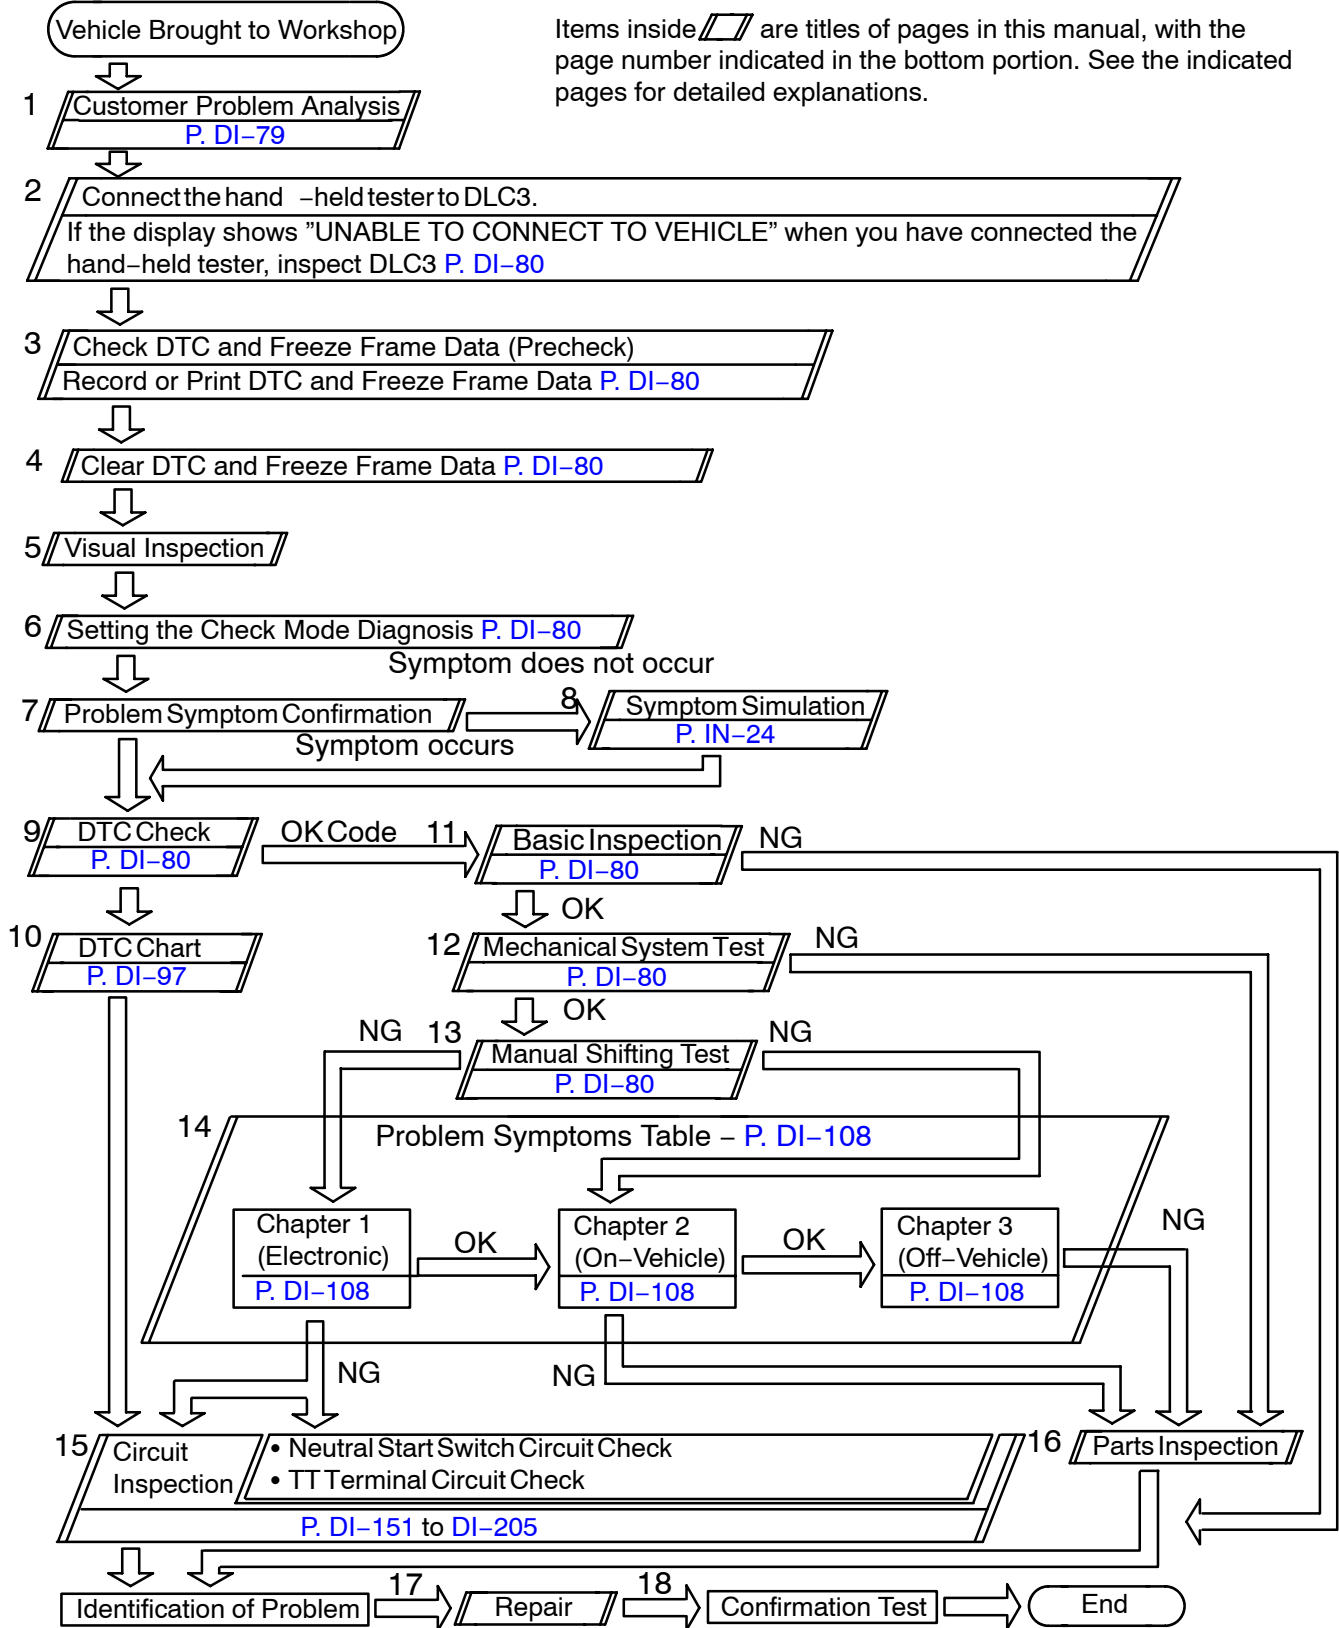

When not using hand –held tester, troubleshoot in accordance with the procedure on the following pages.

