


Connecting terminals Tc and C  
of the DLC3 causes the ECU to display the DTC by flashing the ABS warning  
point.

[illegible]

## INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and C<sub>G</sub> of DLC3.

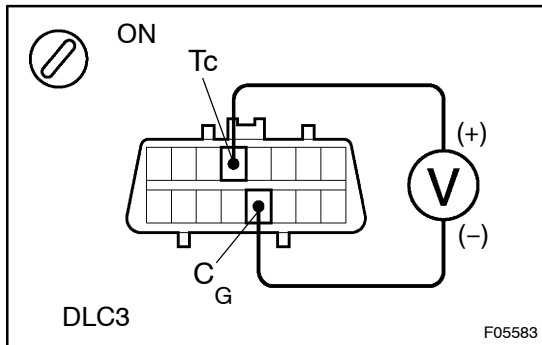

### PREPARATION:

Turn ignition switch ON.

### CHECK:

Measure voltage between terminal Tc and C<sub>G</sub> of DLC3.

### OK:

**Voltage: 10 – 14 V**

OK

If ABS warning light does not blink even after Tc and C<sub>G</sub> are connected, the ECU may be defective.

NG

- 2 IG switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC3, DLC3 and body ground ([See page IN-24](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.