



2

Check harness and connector between theft deterrent ECU and switch, switch and body ground ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU ([See page IN-35](#)).