

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
11, 15 (DI-683)	Actuator Motor Circuit	<ul style="list-style-type: none"> • Actuator motor • Harness or connector between cruise control ECU and actuator motor • Cruise control ECU
12 (DI-685)	Actuator Magnetic Clutch Circuit	<ul style="list-style-type: none"> • STOP Fuse • Stop light switch • Actuator magnetic clutch • Harness or connector between cruise control ECU and actuator magnetic clutch, actuator magnetic clutch and body ground • Cruise control ECU
14 (DI-689)	Actuator Mechanical Malfunction	<ul style="list-style-type: none"> • Actuator motor (actuator lock: motor, arm) • Cruise control ECU
21 (DI-691)	Open in Vehicle Speed Sensor Circuit	<ul style="list-style-type: none"> • Combination meter • Harness or connector between cruise control ECU and combination meter, combination meter and vehicle speed sensor • Vehicle speed sensor • Cruise control ECU
23 (DI-694)	Vehicle Speed Signal Abnormal	<ul style="list-style-type: none"> • Vehicle speed sensor • Cruise control ECU
32 (DI-695)	Control Switch Circuit	<ul style="list-style-type: none"> • Cruise control switch • Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground • Cruise control ECU
41	Cruise control ECU	<ul style="list-style-type: none"> • Cruise control ECU
42	Source voltage drop	<ul style="list-style-type: none"> • Power source
51 (DI-698)	Idle Signal Circuit	<ul style="list-style-type: none"> • Throttle position sensor • Harness or connector between engine and ECT ECU and throttle position sensor • Harness or connector between cruise control ECU and engine and ECT ECU • Cruise control ECU