

CIRCUIT INSPECTION

DTC	P0500/21,23	Vehicle Speed Sensor Circuit
------------	--------------------	-------------------------------------

CIRCUIT DESCRIPTION

See page DI-26, DI-119.

DTC No.	Detection Item	Trouble Area
P0500/21,23	Speed signal is not input to the Engine and ECT ECU while cruise control is set.	<ul style="list-style-type: none">• Combination meter• Harness or connector between Engine and ECT ECU and vehicle speed sensor• Vehicle speed sensor• Engine and ECT ECU

WIRING DIAGRAM

See page DI-26, DI-119.

INSPECTION PROCEDURE

See page DI-26, DI-119.