

DTC	B1276 / 76	Power Mirror Control ECU communication stop (w/ Seat memory only)
------------	-------------------	--------------------------------------------------------------------------

CIRCUIT DESCRIPTION

This DTC is output when communication stops between power mirror control ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1276/76	No communication from power mirror control ECU more than 10 seconds.	<ul style="list-style-type: none"> • Power mirror control ECU • Wireharness

WIRING DIAGRAM

See [page DI-836](#).

INSPECTION PROCEDURE

1	Check power mirror control ECU.
----------	----------------------------------------

 
CHECK:

Check that the operation of the power mirror function is normal.


HINT:

With this inspection, the power mirror control ECU CPU can be diagnosed if it works normally or not.

NG	Replace the power mirror control ECU.
-----------	----------------------------------------------



2 Check wireharness

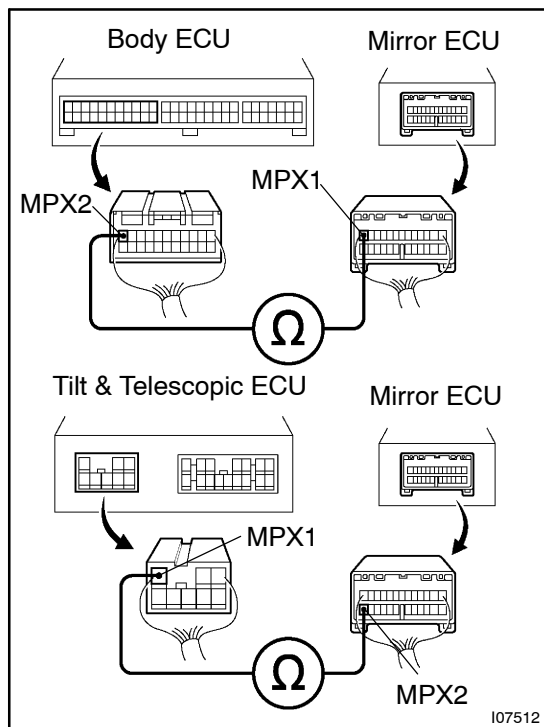

PREPARATION:

Disconnect connector body ECU, power mirror control ECU and tilt & telescopic ECU.

CHECK:

- Check continuity between terminals MPX2 of body ECU and MPX1 of power mirror control ECU.
- Check continuity between terminals MPX1 of tilt & telescopic ECU and MPX2 of power mirror control ECU.

OK:

There is a continuity in wireharness.

NG

Repair or replace wireharness.

OK

Replace the power mirror control ECU.