

INSTALLATION

Installation is in the reverse order of removal ([See page MT-4](#)).

HINT:

After installation, do the road test.