


REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

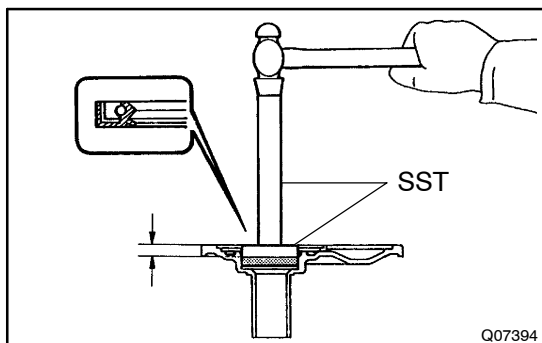

- (b) Using SST and a hammer, drive in a new oil seal.
SST 09950-60010 (09951-00510), 09950-70010
(09951-07150)

Drive in depth:

$11.7 \pm 0.5 \text{ mm}$ ($0.461 \pm 0.020 \text{ in.}$) from retainer end