

INSTALLATION

Installation is in the reverse order of removal ([See page PR-4](#)).

HINT:

After installation, pump MP grease into each fitting with a grease gun until the grease begins to flow around the oil seal.

