


## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

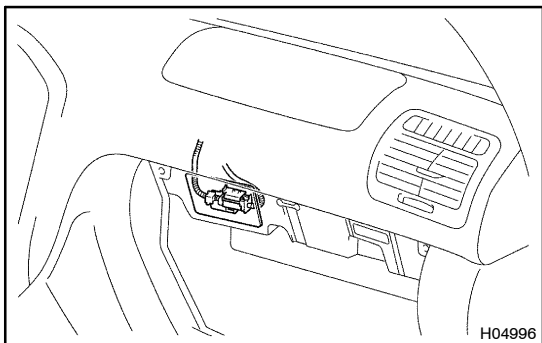


### 1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the glove compartment door.
- (b) Remove the No.1 under cover from the lower No.2 finish panel.

### NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

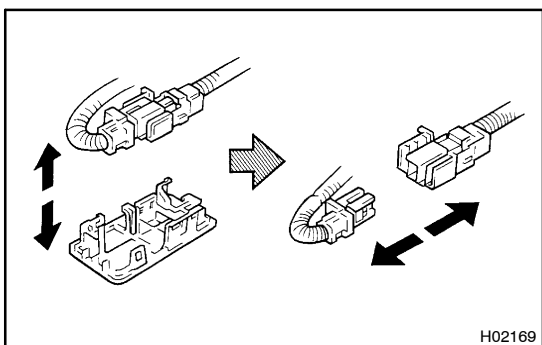


- (c) Pull up the connector.
- (d) Disconnect the front passenger airbag connector.

### 2. REMOVE INSTRUMENT PANEL

(See page BO-127)

### 3. REMOVE THESE PARTS:

- (a) Center bracket
- (b) Defroster nozzle assembly
- (c) No.5 heater to register duct
- (d) No.2 side defroster nozzle duct

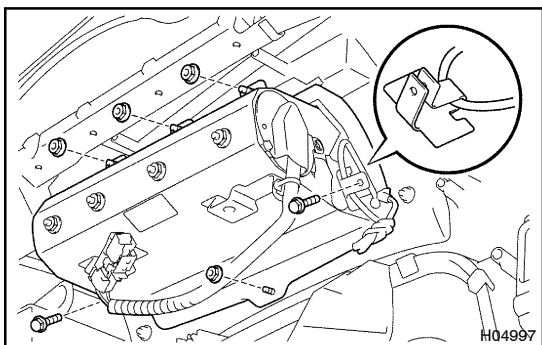

### 4. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts and airbag door straps.
- (b) Remove the 4 nuts, then remove the front passenger airbag assembly.

### CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.