



INSPECTION

1. INSPECT FREE WHEEL HUB COVER

Check the handle moves smoothly.

2. INSPECT INNER HUB

Place the cover in the body and check that the inner hub turns smoothly.