

INSTALLATION

Installation is in the reverse order of removal ([See page SA-49](#)).

w/ ABS:

AFTER INSTALLATION, CHECK ABS SPEED SENSOR SIGNAL ([See page DI-312](#))