

INSTALLATION

Installation is in the reverse order of removal ([See page SA-135](#)).

AFTER INSTALLATION, CHECK FRONT WHEEL ALIGNMENT ([See page SA-9](#))