


## REMOVAL

### 1. REMOVE FRONT WHEEL

**Torque: 209 N·m (2,131 kgf·cm, 154 ft·lbf)**

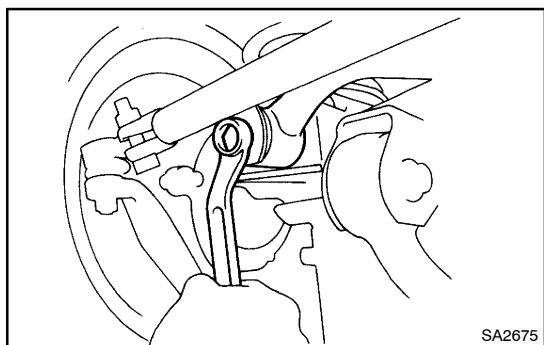


### 2. DISCONNECT LATERAL CONTROL ROD FROM AXLE HOUSING

Remove the bolt, washer and disconnect the lateral control rod from the axle housing.

**Torque: 171 N·m (1,750 kgf·cm, 127 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

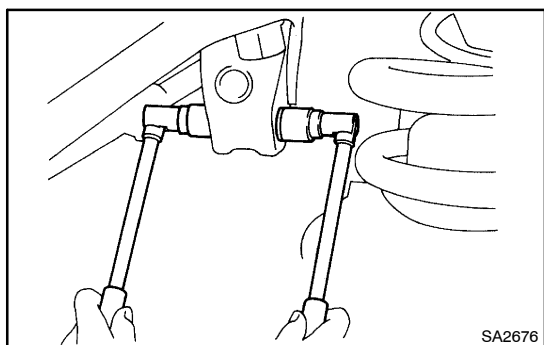

### 3. REMOVE LATERAL CONTROL ROD FROM FRAME

Remove the nut, bolt and lateral control rod.

**Torque: 171 N·m (1,750 kgf·cm, 127 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.