


## REMOVAL

### 1. REMOVE FRONT WHEEL

**Torque: 209 N·m (2,131 kgf·cm, 154 ft·lbf)**

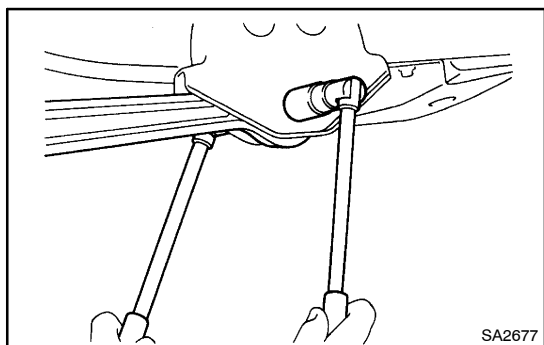


### 2. REMOVE LEADING ARM

- (a) Remove the bolt, washer and nut from the leading arm on the frame side.

**Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

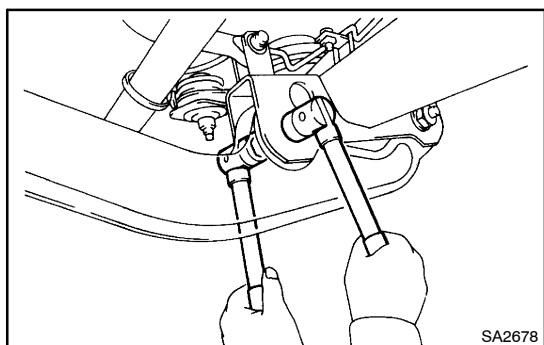

- (b) Remove the 2 bolts and nuts from the leading arm on the axle housing side.

**Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)**

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

- (c) Remove the leading arm.