


## REPLACEMENT

### REPLACE BUSHINGS

- (a) Front side:  
Using SST and a press, replace the bushing from the leading arm.  
SST09710 -30050
- (b) Rear side:  
Using SST and a press, replace the bushing from the leading arm.  
SST09710 -22042 (09710 -02061)

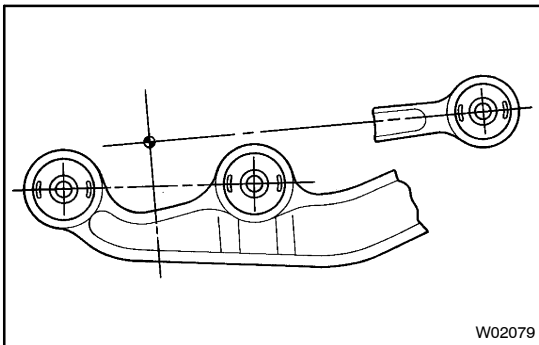

### HINT:

Assemble a new bushing, as shown in the illustration.