


## REMOVAL

### 1. REMOVE ENGINE UNDER COVER

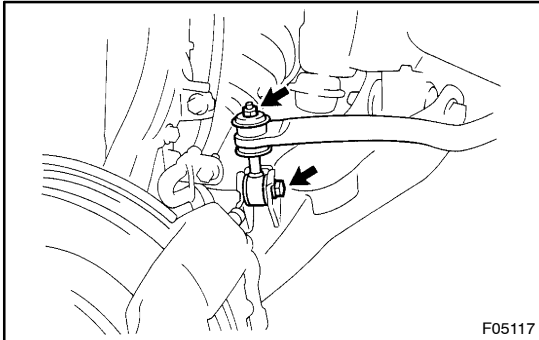


### 2. REMOVE LH AND RH STABILIZER BAR LINKS

Remove the 2 nuts, 2 bolts, 4 retainers, 4 cushions and 2 stabilizer bar links.

**Torque:**

**Bolt: 52 N·m (530 kgf·cm, 38 ft·lbf)**

**Nut: 25 N·m (250 kgf·cm, 18 ft·lbf)**

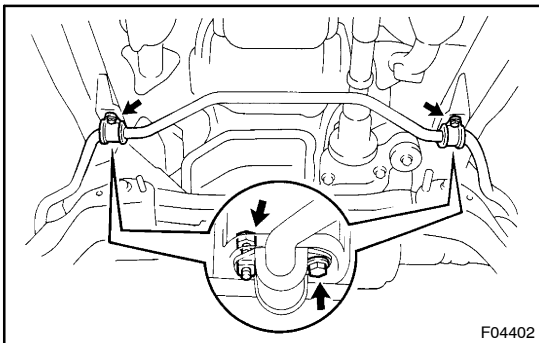

### 3. REMOVE STABILIZER BAR

(a) Remove the 4 bolts, 2 brackets and 2 cushions.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

**HINT:**

At the time of installation, please refer to the following items.

- Install the cushion with its opening facing the back side of the vehicle.
- Install the bracket properly so that its flange will face the outside of the vehicle.

(b) Remove the stabilizer bar.