INSTALLATION SA18A-02

Installation is in the reverse order of removal (See page SA-152).