


REMOVAL


REMOVE REAR AXLE SHAFT

- (a) Remove the 6 nuts and washers.

Torque: 33 N·m (335 kgf·cm, 24 ft·lbf)

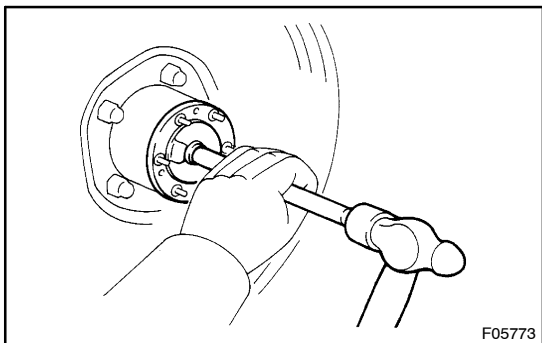

- (b) Using a brass bar and hammer, strike the center part of the axle shaft to remove the 6 cone washers.

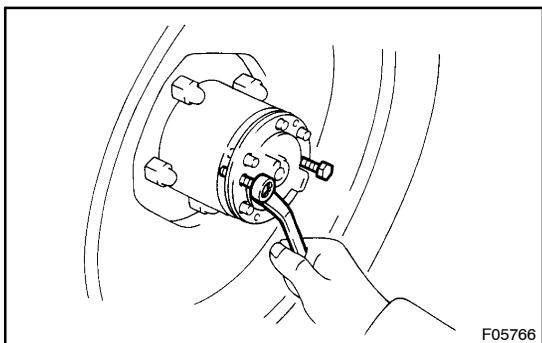

- (c) Install and gradually tighten 2 bolts evenly and pull the axle shaft.
(d) Remove the 2 bolts from the rear axle shaft.
(e) Remove the rear axle shaft and gasket.

NOTICE:

Be careful not to damage the oil seal.