



## INSPECTION

### INSPECT AXLE SHAFT

Using a dial indicator, measure the runout of the shaft and flange.

**Maximum shaft runout: 2.0 mm (0.079 in.)**

**Maximum flange runout: 0.05 mm (0.0020 in.)**

If the rear axle shaft or flange are damaged or worn, or if runout is greater than the maximum, replace the rear axle shaft.