


## DISASSEMBLY

### 1. REMOVE OIL SEAL AND INNER BEARING

- (a) Using SST, remove the oil seal.  
SST 09308-00010
- (b) Remove the inner bearing from the hub.

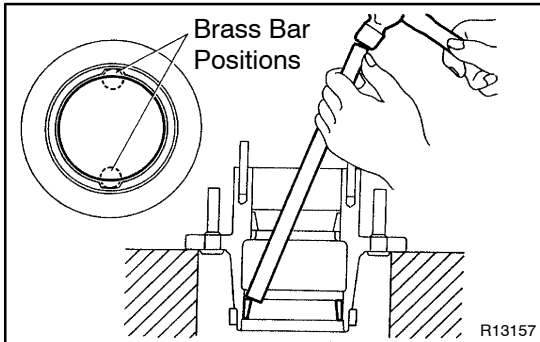

### 2. IF NECESSARY, REMOVE 2 BEARING OUTER RACES

Using a brass bar and hammer, remove the 2 bearing outer races.

#### NOTICE:

Be careful not to damage the ABS speed sensor rotor.