


REASSEMBLY


1. IF NECESSARY INSTALL 2 BEARING OUTER RACES

- (a) Using SST and a press, install a new outside bearing outer race.
SST 09950 -60020 (09951 -00710),
09950-70010 (09951 -07150)
- (b) Using SST and a press, install a new inside bearing outer race.
SST 09950 -60020 (09951 -00810),
09950-70010 (09951 -07150)

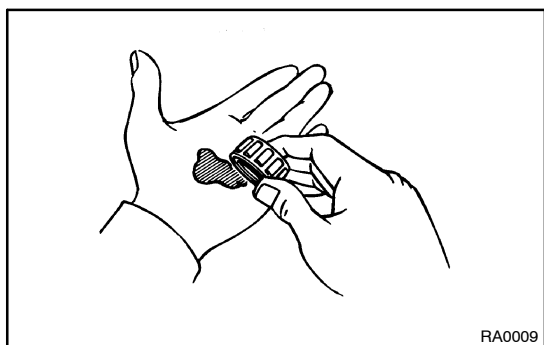

2. PACK BEARING WITH MP GREASE


- (a) Place MP grease on the palm of your hand.
- (b) Pack grease into the bearing until the grease ooze out from the other side.
- (c) Do the same around the bearing circumference.

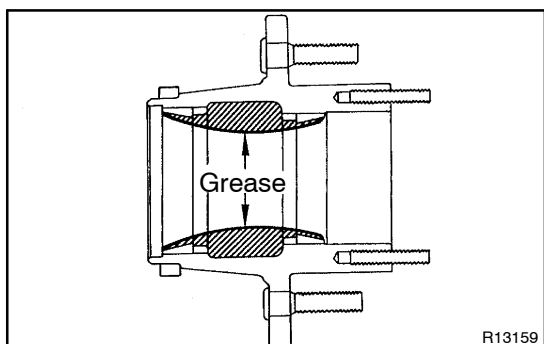

3. COAT INSIDE OF HUB WITH MP GREASE

4. INSTALL INNER BEARING AND OIL SEAL

- (a) Place inner bearing into the hub.

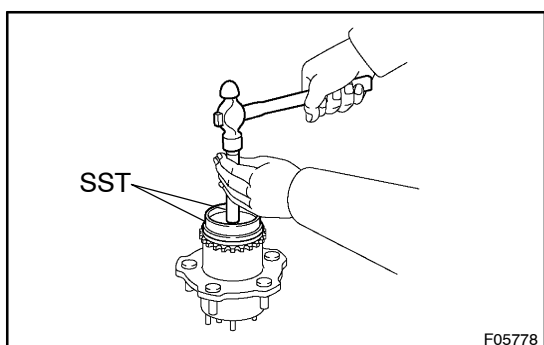

- (b) Using SST and a hammer, install a new oil seal into the hub.
SST 09223 -15020, 09950 -70010 (09951 -07150)
- (c) Apply MP grease to the oil seal lip.