



## **INSPECTION**

## **INSPECT SHOCK ABSORBER**

Compress and extend the shock absorber rod and check that there is no abnormal resistance or unusual operation sounds. If there is any abnormality, replace the shock absorber with a new one.

## **NOTICE:**

w/o AHC System:

When disposing the shock absorber, see DISPOSAL on page SA-280.