


## REMOVAL

### 1. SUPPORT REAR AXLE HOUSING WITH JACK

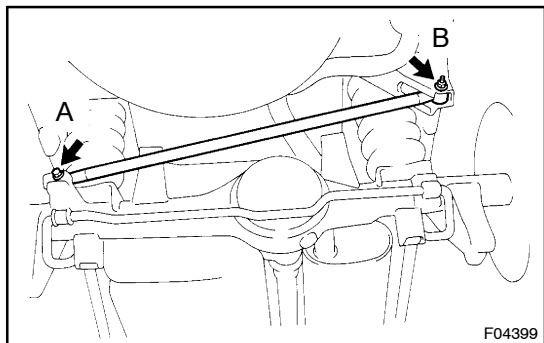

### 2. REMOVE LATERAL CONTROL ROD

Remove the 2 bolts, nut, washer and lateral control rod.

**Torque:**

**A: 149 N·m (1,520 kgf·cm, 110 ft·lbf)**

**B: 150 N·m (1,530 kgf·cm, 111 ft·lbf)**

**HINT:**

At the time of installation, please refer to the following items.

- Replace the used nut and bolt with new ones.
- After stabilizing the suspension, torque the nut and bolt.