


## REMOVAL

### 1. DRAIN SUSPENSION FLUID AHC

- (a) Connect the hose to the bleeder plug for height control accumulator and loosen the bleeder plug.
- (b) After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

**Torque: 6.9 N·m (70 kgf·cm, 6 1 in·lbf)**

### 2. REMOVE FRONT FENDER APRON

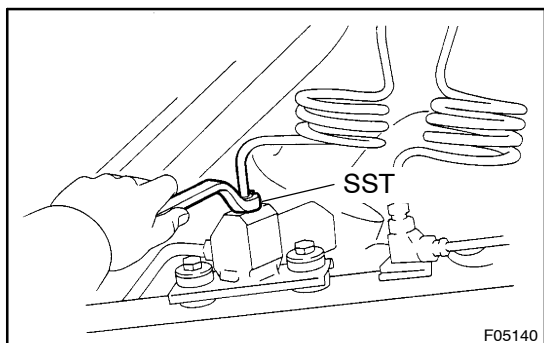


### 3. REMOVE PUMP ATTENUATOR

- (a) Using SST, disconnect the inlet fluid line from the pump attenuator.

SST 09751 –36011

**Torque: 15 N·m ( 155 kgf·cm, 11 ft·lbf)**

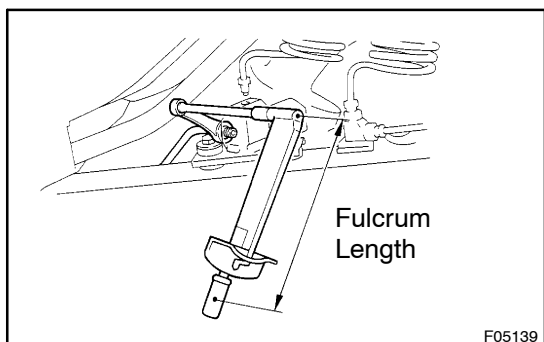

- (b) Using SST, disconnect the outlet fluid line from the pump attenuator.

SST 09631 –22020

**Torque: 24 N·m (245 kgf·cm, 18 ft·lbf)**

#### HINT:

At the time of installation, please refer to the following items.

- Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).
  - This torque value is effective in case that SST is parallel to a torque wrench.
- (c) Remove the 2 bolts and pump attenuator.
  - (d) Remove the 2 collars and cushions.

**Torque: 18 N·m ( 185 kgf·cm, 13 ft·lbf)**