## TROUBLESHOOTING

SR0P3-01

## PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in the order shown. If necessary, repair or replace these parts.

Symptom	Suspect Area	See page
Hard steering	1. Tires (Improperly inflated)	SA-5
	2. Power steering fluid level (Low)	SR-5
	3. Drive belt (Loose)	_
	4. Front wheel alignment (Incorrect) (F	RFS) SA-7
		IFS) SA-9
	5. Steering system joints (Worn)	_
	6. Upper suspension arm ball joint (Worn)	IFS) SA-131
	7. Lower suspension arm ball joint (Worn)	IFS) SA-136
	8. Steering column (Binding)	-
	9. Power steering vane pump (1FZ-	-FE) SR-38
	(2UZ–FE Eur	ope) SR-53
	(2UZ-FE Except Eur	ope) SR-63
	(*	HZ) SR-75
	(1HD-T, 1HD-I	FTE) SR-86
	10.Power steering gear (F	RFS) SR-98
		IFS) SR-110
Poor return	Tires (Improperly inflated)	SA-5
	2. Front wheel alignment (Incorrect) (F	RFS) SA-7
		IFS) SA-9
	3. Steering column (Binding)	_
	4. Power steering gear (F	RFS) SR-98
		IFS) SR-110
Excessive play	Steering system joints (Worn)	_
		IFS) SA-131
		IFS) SA-136
	4. Intermediate shaft, Universal joint, Sliding yoke (W	orn) –
		RFS) SA-14
		IFS) SA-20
	6. Power steering gear (F	RFS) SR-98
		IFS) SR-110
Abnormal noise	Power steering fluid level (Low)	SR-5
	2. Steering system joints (Worn)	_
	3. Power steering vane pump (1FZ-	-FE) SR-38
	(2UZ-FE Eur	ope) SR-53
	(2UZ-FE Except Eur	
		HZ) SR-75
	(1HD-T, 1HD-I	, i
		RFS) SR-98
		IFS) SR-110

## HINT:

When the problem occurs on the power tilt and telescopic steering system, refer to the DI section. (See page DI-409)