

## REMOVAL

1. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
2. w/ Airbag:  
REMOVE STEERING WHEEL PAD  
(See page SR-13)


3. w/ Airbag:  
REMOVE STEERING WHEEL  
(See page SR-13)

4. LHD:  
REMOVE LH FRONT FENDER APRON SEAL

Remove the 9 clips.

5. RHD:  
REMOVE RH FRONT FENDER APRON SEAL

Remove the 11 clips.

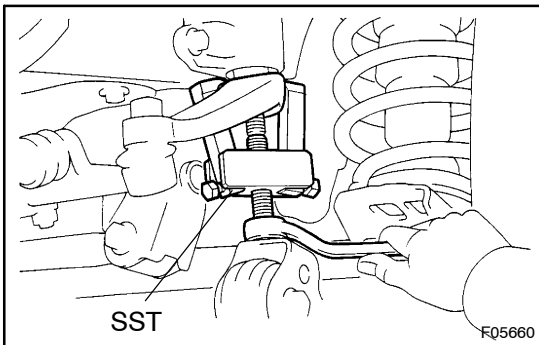


6. DISCONNECT PITMAN ARM

- (a) Remove the nut and spring washer.
- (b) Using SST, disconnect the pitman arm with relay rod from the gear assembly.  
SST 09628-62011

7. REMOVE JOINT COVER

Remove the 2 bolts.

8. DISCONNECT SLIDING YOKE  
(See page SR-13)

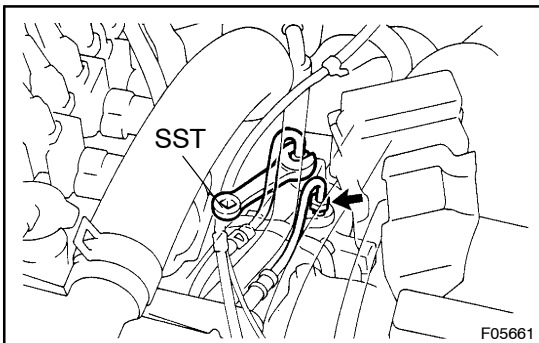

9. DISCONNECT PRESSURE FEED AND RETURN TUBES

Using SST, disconnect the tube.

SST 0963 1-22020

10. REMOVE PS GEAR ASSEMBLY

Remove the 4 bolts and nuts.