REASSEMBLY

TR05K-01

Reassembly is in the reverse order of disassembly (See page TR-13). \mbox{HINT} :

Coat all of the sliding and rotating surfaces with gear oil before reassembly.