

## DISASSEMBLY


### 1. REMOVE REAR TAPER ROLLER BEARING

Using SST, a press and socket wrench, remove the rear taper roller bearing.

SST 09950-00020

#### NOTICE:

**Set the claw of SST to the bearing inner race securely.**

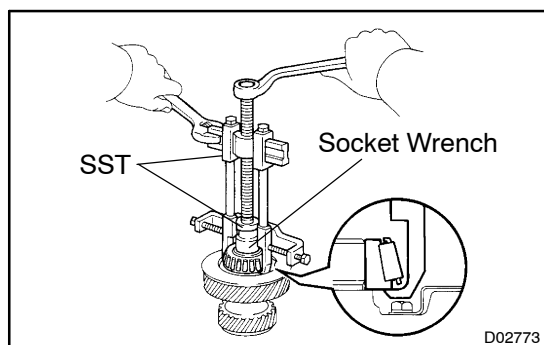


### 2. REMOVE FRONT TAPER ROLLER BEARING

Using SST and a socket wrench, remove the front taper roller bearing.

SST 09950-40011 (09951-04020, 09952-04010, 09953-04030, 09954-04030, 09955-04060, 09957-04010, 09958-04010), 09950-60010 (09951-00300)

#### NOTICE:

**Set the claw of SST to the bearing inner race securely.**

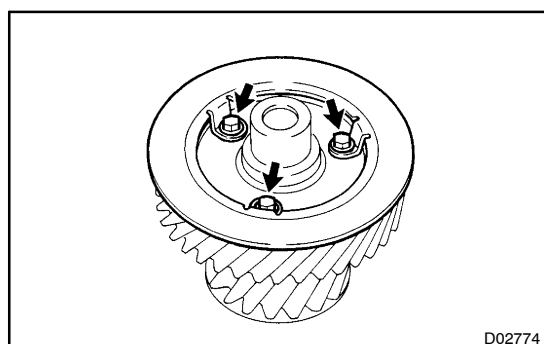

### 3. REMOVE OIL RECEIVER

Remove the 3 bolts and oil receiver.