


## REPLACEMENT

### 1. REMOVE OIL SEAL

Using a screwdriver, pry out the oil seal from the rear extension housing.

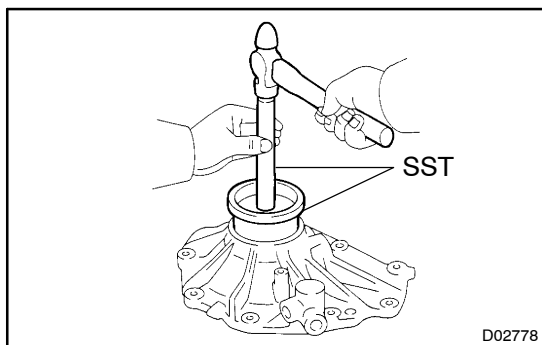

### 2. INSTALL OIL SEAL

- (a) Apply MP grease to the lip of a new oil seal.
- (b) Using SST and a hammer, drive in a new oil seal.  
SST 09223-15020, 09950-70010 (09951-07150)