

WINCH UNIT

ON-VEHICLE INSPECTION

W100H-01

1. INSPECT WINCH CONTROL SWITCH



- (a) Connect the winch control switch connector.
- (b) The power indicator light will light when the winch turns ignition switch ON.

- (c) Operate winch control switch, confirm winch function.

HINT:

Be careful not to tighten or strain the winch wire.

- (d) Turn the ignition switch OFF.

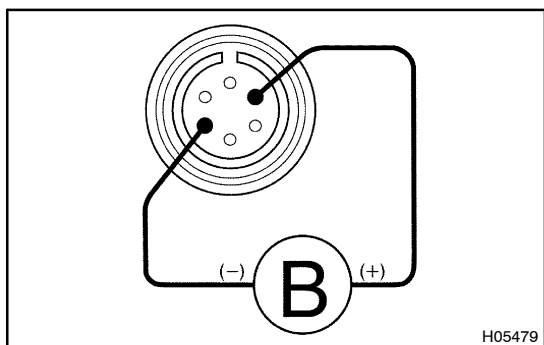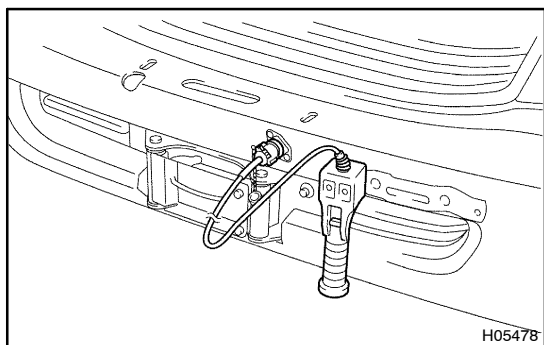

2. INSPECT OVERHEAT TEMPERATURE INDICATOR

When battery voltage is supplied to the winch control switch, the overheat temperature indicator light will light and buzzer sound.