


## INSPECTION


### INSPECT MAGNET SWITCH NO.2

- (a) Push in the plunger and release it. Check that it returns quickly to its original position.

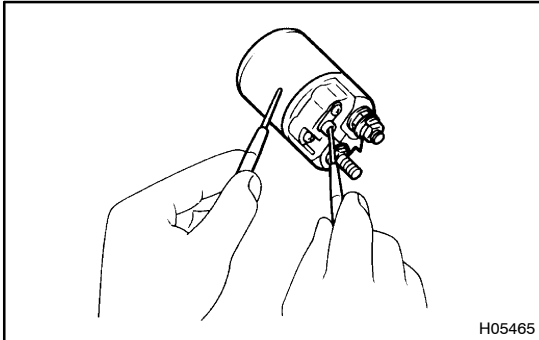

- (b) Using an ohmmeter, check for continuity between the base lead wire terminal and magnet switch body.

If there is no continuity, replace the magnet switch.

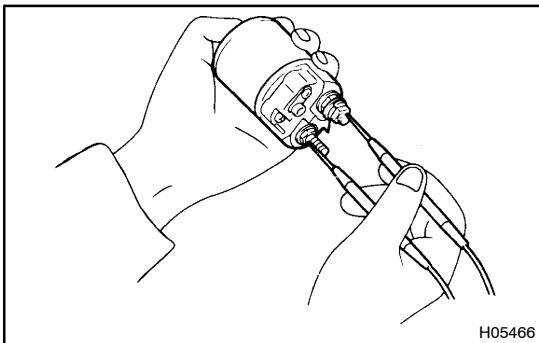

- (c) Using an ohmmeter, check for no continuity between the magnet switch terminal and motor lead wire terminal with plunger released.