
ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI31H-0

When using hand -held tester, troubleshoot in accordance with the procedure on the following pages.

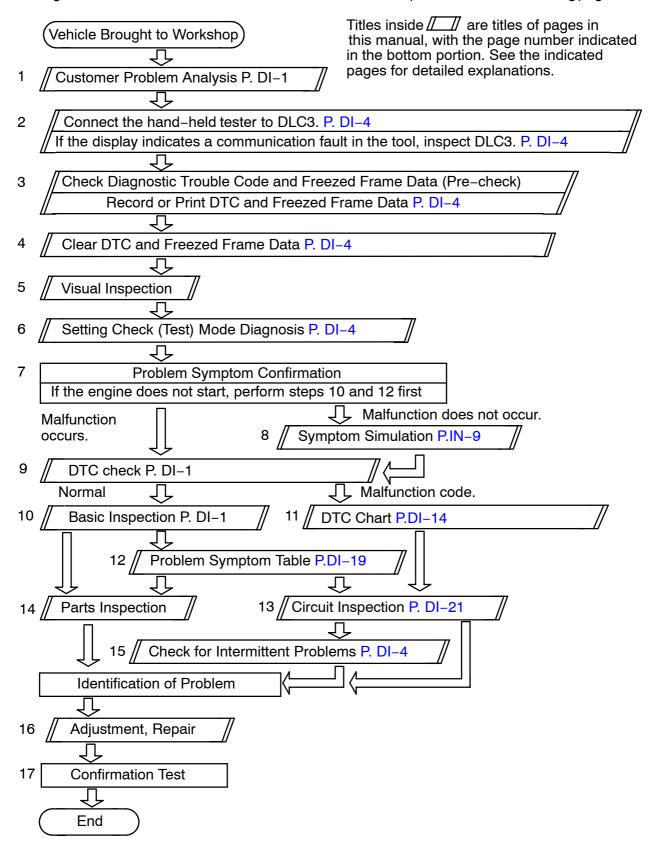

When not using hand -held tester, troubleshoot in accordance with the procedure on the following pages.

