

CATALYTIC CONVERTER FOR OXIDATION (CCo) SYSTEM (Europe)

EC09I-01

ON-VEHICLE INSPECTION

1. INSPECT EXHAUST PIPE ASSEMBLY

- (a) Check the connections for looseness or damage.
- (b) Check the clamps for weakness, cracks or damage.

2. INSPECT CCo

Check for dents or damage.

If any part of the protector is damaged or dented to the extent that it contacts the CCo, repair or replace it.