


ECD MAIN RELAY INSPECTION

ED00J-02

1. REMOVE RELAY BOX COVER
2. REMOVE ECD MAIN RELAY (Marking: ECD)

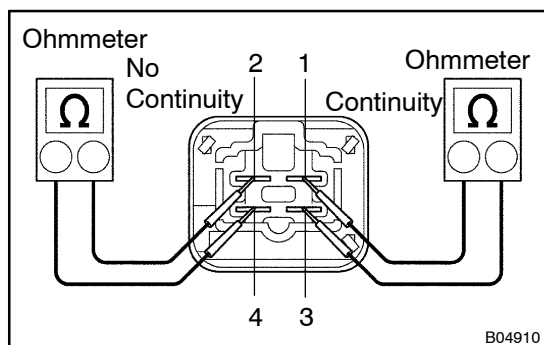


3. INSPECT ECD MAIN RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 3.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

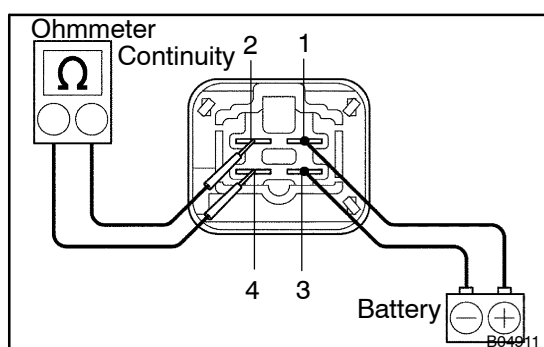

- (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 3.
- (2) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

4. REINSTALL ECD MAIN RELAY
5. REINSTALL RELAY BOX COVER