



## INSTALLATION

- 1. INSTALL INTAKE HEATER AND INTAKE SHUTTER**
  - (a) Place 2 new gaskets, the intake heater and intake shutter.
  - (b) Install the 2 bolts and 2 nuts.  
**Torque: 19.6 N·m (200 kgf·cm, 14 ft·lbf)**
- 2. CONNECT INTAKE HEATER WIRE**
- 3. INSTALL VSV FOR INTAKE SHUTTER**
  - (a) Install the VSV with the bolt.
  - (b) Connect the 2 vacuum hoses to the cylinder head cover and actuator